


# ACU-FEED Automatic Screw Feeder

Acu-Feed parts list.

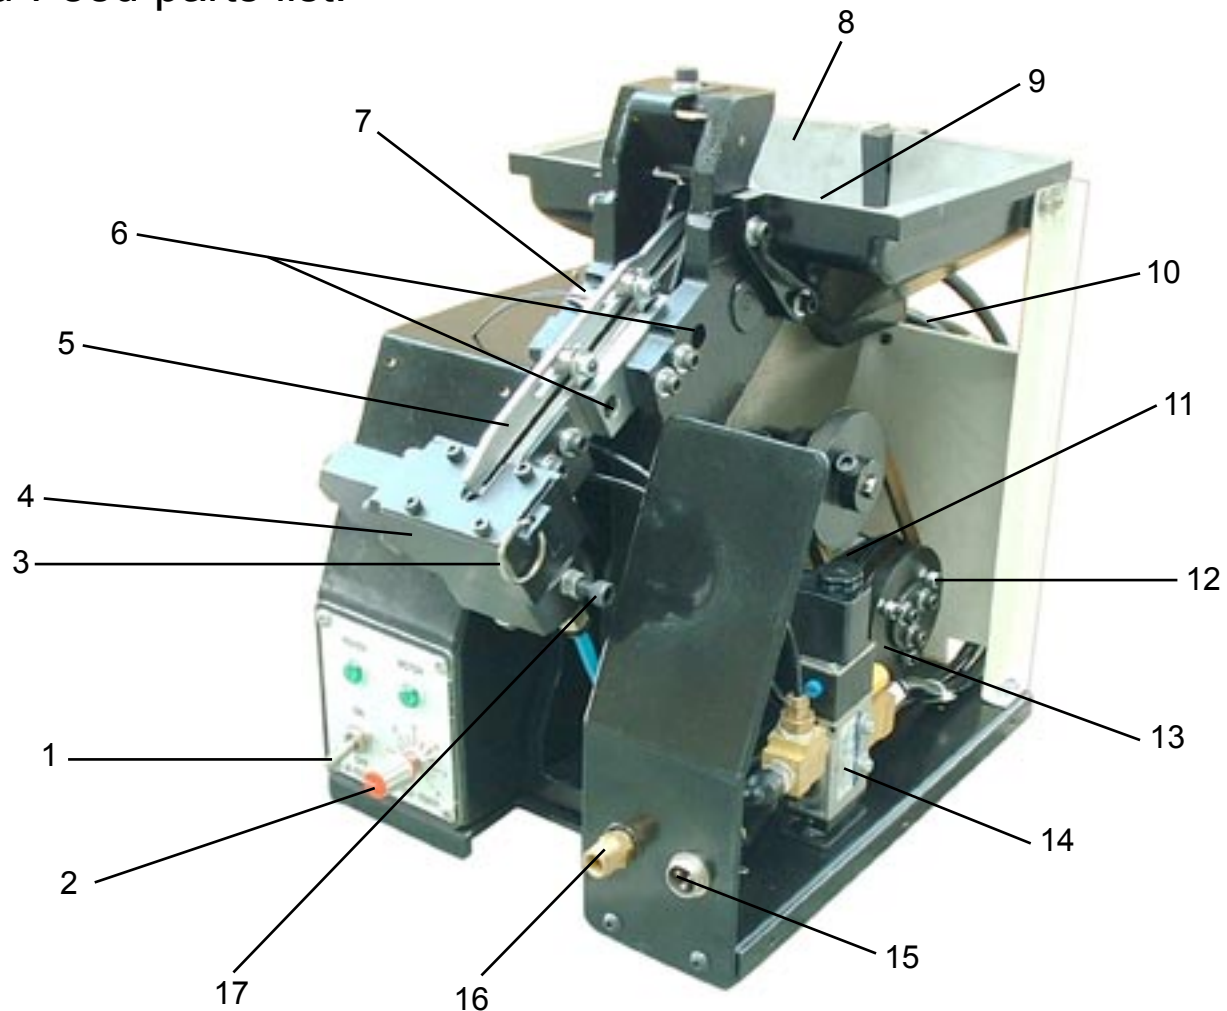

- |                               |                                  |
|-------------------------------|----------------------------------|
| 1. Power Switch               | 10. FRL Unit                     |
| 2. Screw Delivery Timer       | 11. Motor                        |
| 3. Escapement Ring            | 12. Clutch Adjusting Screws      |
| 4. Escapement                 | 13. Motor clutch                 |
| 5. Screw Head Guide           | 14. Electromagnetic valve        |
| 6. Head Guide Adjusting Screw | 15. Signal connector             |
| 7. Photoelectric Switch       | 16. Air Hose Connector           |
| 8. Hopper                     | 17. Delivery Air Adjusting Screw |
| 9. Swing Chute                |                                  |

Head Office  
4455 Alaska Street  
Burnaby, BC  
V5C 5T3 Canada  
Tel: (604) 298-2933  
Fax: (604) 294-8131

Distributed by:




Eastern Office  
#10 - 1730 McPherson Crt.  
Pickering, ON  
L1W 3E6 Canada  
Tel: (905) 839-6111  
Fax: (905) 839-7100

# ACU-FEED Automatic Screw Feeder

## Air Driver parts list.

1. Air hose set
2. Screw Delivery Hose
3. Driver
4. Driver clutch
5. Adjustment nut
6. Sliding Base
7. Driver switch
8. Pipe spring
9. Pipe cover
10. Bit
11. Pin
12. Hose Nipple
13. Y Pipe
14. Jaw
15. Jaw Pin
16. Jaw Spring
17. Rocker
18. Rocker Pin
19. Rocker Spring
20. Nipple Cramp

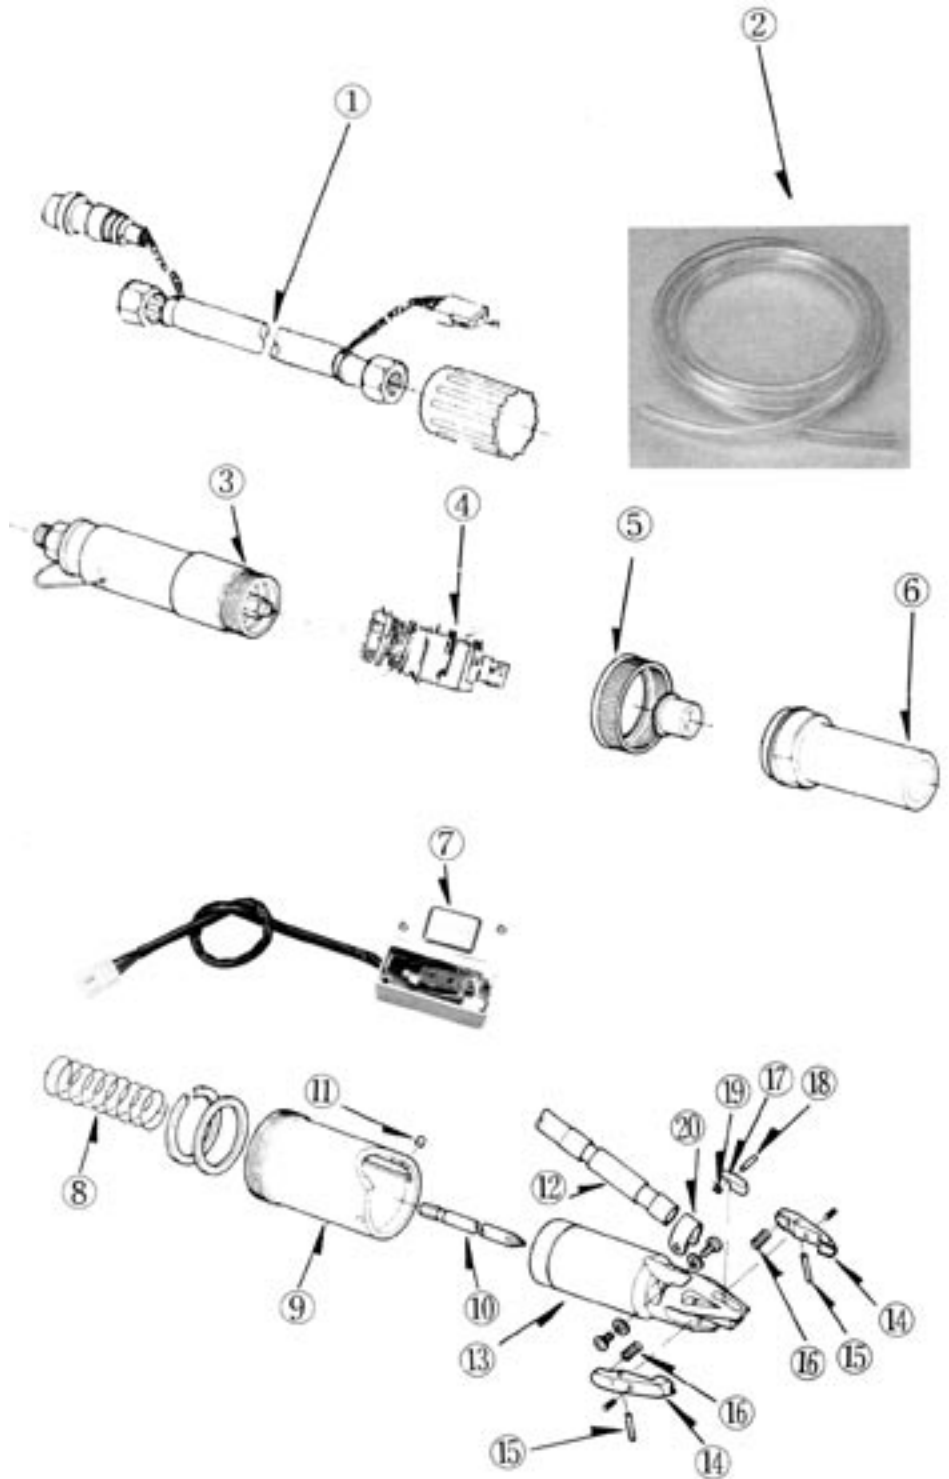

Head Office  
 4455 Alaska Street  
 Burnaby, BC  
 V5C 5T3 Canada  
 Tel: (604) 298-2933  
 Fax: (604) 294-8131

Distributed by:



Eastern Office  
 #10 - 1730 McPherson Crt.  
 Pickering, ON  
 L1W 3E6 Canada  
 Tel: (905) 839-6111  
 Fax: (905) 839-7100