


UEC 4500 QUICK GUIDE

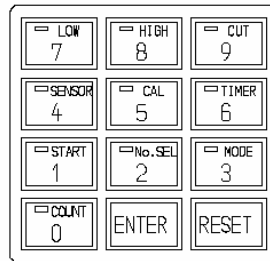

MODE 99 takes you into program mode.
“3” (mode), “9”, “9”, “ENTER”, “ENTER”

To change the **CALIBRATION VALUE** :

- 3 (mode)
- 9
- 9
- “ENTER”
- “ENTER”
- 5 (CAL)
- “ENTER”
- type calibration value followed by “ENTER”
- “RESET”

To change the **HIGH TORQUE (Upper limit)**

- 3 (mode)
- 9
- 9
- “ENTER”
- “ENTER”
- 8 (HIGH)
- “ENTER”
- type in value eg. 25.0 NM type 250 “ENTER”
- “RESET”

To change the **TARGET TORQUE (CUT VALUE)**

- 3 (mode)
- 9
- 9
- “ENTER”
- “ENTER”
- 9 (CUT)
- “ENTER”
- type in value eg. 35.0 NM type 350 “ENTER”
- “RESET”

To change the **LOW TORQUE (Lower Limit)**

- 3 (mode)
- 9
- 9
- “ENTER”
- “ENTER”
- 7 (LOW)
- “ENTER”
- type in value eg. 15.0 NM type 150 “ENTER”
- “RESET”