


UDBP-T60 SERIES BATTERY OIL-PULSE TOOL

EXPLODED VIEW

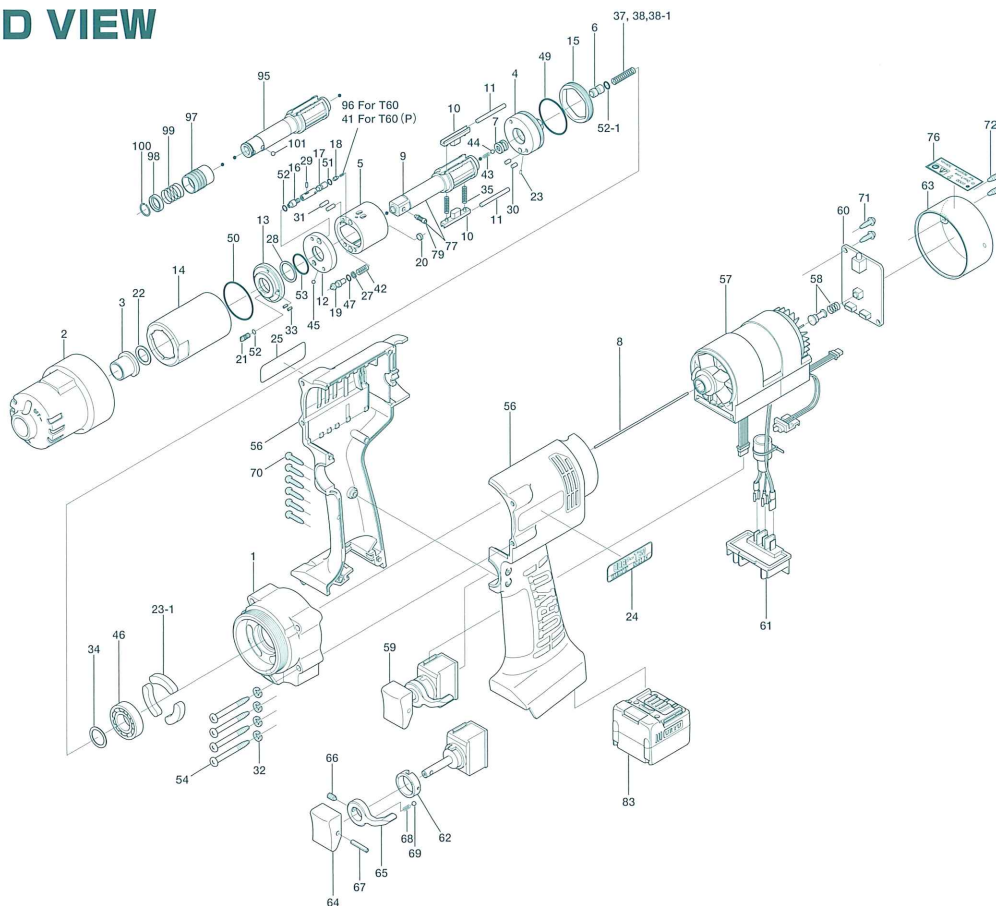

PARTS LIST

* 861-495-1 Handle Assembly components are marked with "O".

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	094-065-5	Handle Front Plate	1	#34	975-752-0	Adjusting Spacer 15×10×t	1	#64	147-107-2	○ Valve Lever	1
# 2	094-439-5	Front Casing	1	#35	976-805-0	Spring 3.5×25.2 (0.4) WPC	2	#65	480-212-8	○ Reverse Lever	1
# 3	190-328-6	Anvil Bushing	1	#37	976-627-0	Spring 3.3×13 (0.5) n=9.5 (Strong)	1	#65-1	861-189-1	○ Coupling	1
# 4	094-901-4	Rear Liner Plate	1	#38	976-628-0	Spring 3.3×13 (0.5) n=10.5 (Standard)	1	#66	954-105-0	○ Screw M4×5	1
# 5	145-902-6	Liner	1	#38-1	976-829-0	Spring 3.4×13 (0.5) n=11.5 (Weaken)	1	#67	973-014-0	○ Roller Pin 2×14	1
# 6	145-546-6	Piston	1	#41	976-636-0	Spring 2.8×7.4 (0.45)	1	#68	976-006-0	○ Spring 3×5 (0.4)	1
# 7	145-929-6	Check Valve Cover	1	#42	976-859-0	Spring 4.3×20.4 (0.55)	1	#69	981-002-0	○ Ball 1/8	1
# 8	094-130-6	Operating Rod 1.4×95.5	1	#43	976-645-0	Spring 2.4×5 (0.3)	1	#70	861-179-1	○ Screw	7
# 9	094-319-4	Anvil (O)	1	#44	981-001-0	Ball 3/32	1	#71	861-180-1	○ Screw	2
#10	145-440-6	Driving Blade	2	#45	981-045-0	Ball 1.5mm	1	#72	861-181-1	○ Screw	2
#11	145-974-6	Roller 2.5×26	2	#46	982-902-0	Ball Bearing 6901	1	#76	094-995-4	Name Plate (Warning)	1
#12	145-973-6	Liner Casing Spacer	1	#47	990-309-0	O-Ring ARP568-003 (E)	2	#77	891-570-1	Anvil CP (P)	1
#13	094-904-4	Front Liner Plate	1	#49	990-329-0	O-Ring JW1530-19	1	#79	891-300-1	Socket Retainer Pin Assembly	1
#14	145-905-6	Liner Casing	1	#50	990-605-0	O-Ring 25×1.45	1	Parts for UDBP-T60 Driver Anvil type			
#15	145-906-6	Liner Casing Cover	1	#51	990-621-0	O-Ring 3.8×1.8×1.0	1	#95	145-350-7	Driver Anvil	1
#16	145-907-6	Relief Valve Spindle	1	#52	990-900-0	O-Ring SNS-2	2	#96	976-631-0	Spring (2.8×7.5)(0.45)	1
#17	094-970-4	Relief Valve	1	#52-1	990-305-0	O-Ring ARP568-003(KS)	1	#97	011-351-1	Bit Sleeve	1
#18	144-270-0	Pressure Regulating Valve	1	#53	991-030-0	X-Ring (Special) X12	1	#98	011-352-1	Bit Spacer	1
#19	145-972-6	Accumulator	1	#54	963-364-0	Tapping Screw M4×40 (H)	4	#99	976-327-0	Spring (13.5×11)(0.9)	1
#20	145-908-7	Accumulator Cover	1	#55	861-170-1	Handle Body Assembly	1	#100	978-117-0	Snap Ring (11.7×1)	1
#21	194-742-0	Oil Plug	1	Parts for #861-170-1 Handle Assembly				#101	981-002-0	Ball (1/8)	1
#22	145-327-6	Anvil Front Spacer	1	#56	861-171-1	○ Handle (R,L)	1	Standard Accessories			
#23	150-064-5	Plug	1	#57	861-172-1	○ Motor Assembly (LED · Fan)	1	#73	939-091-0	Allen Head Wrench 1.5 (80×20)	1
#23-1	080-835-3	Filter	3	#58	861-173-1	○ Slide Base Assembly	1	Option			
#24	094-924-4	Name Plate	1	#59	861-174-1	○ Switch Assembly	1	#83	861-182-1	Battery Pack UB222Li	1
#25	094-997-4	Name Plate (other)	1	#60	861-175-1	○ Operating Board (LED)	1	#83-1	861-185-1	Battery Charger UBC-A	1
#27	944-002-0	Supporting Ring 2.6×4.5×1	1	#61	861-176-1	○ Battery Contact	1	#83-2	861-186-1	Battery Charger UBC-E	1
#28	944-213-0	Supporting Ring 12×16×1	1	#62	861-177-1	○ Sleeve	1	#83-3	861-196-1	Power Code (for UBC-A)	1
#29	970-013-0	Pin (H) 1.5×4	1	#63	861-178-1	○ Handle Cover	1	#83-4	861-197-1	Power Code (for UBC-E)	1
#30	970-130-0	Pin (H) 2.45×4.5	2								
#31	970-131-0	Pin (H) 2.45×9.5	2								
#32	962-006-0	Spring Washer	4								
#33	973-040-0	Roller Pin 1.5×5	2								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-527-10-04-20-501