UW-6SSH(K), UW-6CSH(K) IMPACT WRENCHES

EXPLODED VIEW

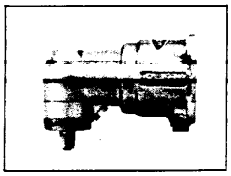

Angle Head Casing Assembly (B)
(For UW-6CSH)
Code No. 020-883-1
Components
(#60 to 77)

Angle Head Casing Assembly (A)
(For UW-6CSH)
Code No. 020-882-1
Components
(#60, 61, 66 to 77)

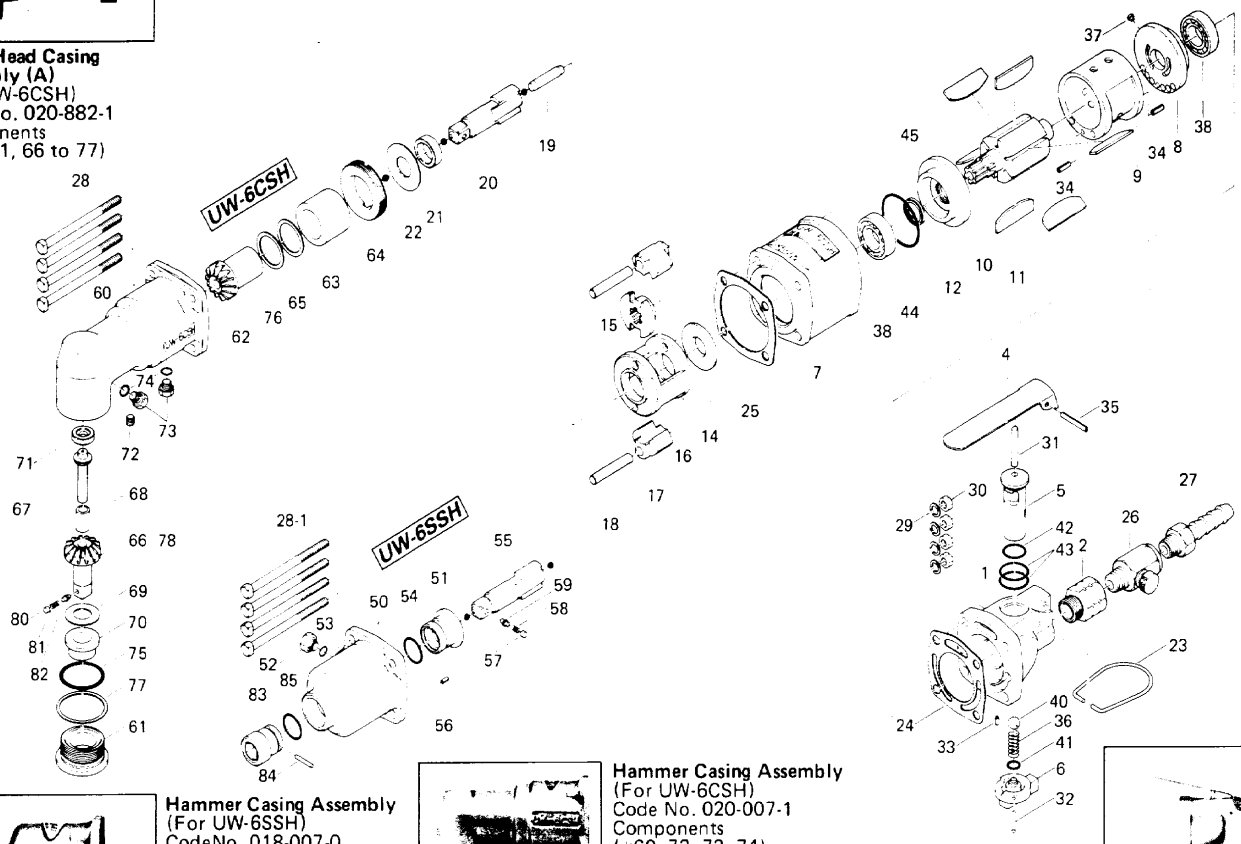

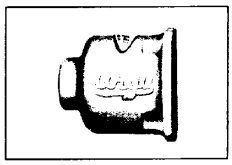

Hammer Casing Assembly
(For UW-6SSH)
CodeNo. 018-007-0
Components
(#50 to 54)

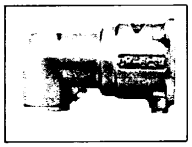

Hammer Casing Assembly
(For UW-6CSH)
Code No. 020-007-1
Components
(#60, 72, 73, 74)

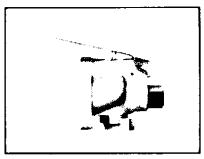

Handle Assembly
Code No. 020-003-1
Components
#1, 2, 4, 5, 6, 31, 32, 33, 35, 36, 40, 41, 42, 43

Handle Assembly components are marked with "○"
Hammer Casing Assembly (for UW-6SSH) components are marked with "x".
Hammer Casing Assembly (for UW-6CSH) components are marked with "△".
Angle Head Casing Assembly (A) (for UW-6CSH) components are marked with "●".
Angle Head Casing Assembly (B) (for UW-6CSH) components are marked with "■".

PARTS LIST

Index No.	Code No.	Part Name	Quantity
# 1	020-014-2	○ Handle	1
# 2	185-091-7	○ Air Inlet Bushing	1
# 4	020-107-1	○ Valve Lever	1
# 5	020-210-1	○ Reverse Valve	1
# 6	020-212-1	○ Reverse Lever	1
# 7	020-025-1	Casing	1
# 8	018-285-1	Rear Plate	1
# 9	018-286-1	Cylinder	1
#10	018-287-1	Rotor	1
#11	018-288-1	Blade	6
#12	018-289-1	Front Plate	1
#14	018-310-1	Anvil Rear Spacer	1
#15	018-311-1	Hammer Cam	1
#16	018-312-1	Hammer Cage	1
#17	018-313-1	Hammer	2
#18	018-317-1	Hammer Pin	2
#19	041-318-1	Pilot Pin	1
#20	018-319-1	Anvil (O)	1
#21	018-326-1	Hammer Cage Bushing	1
#22	018-327-1	Anvil Front Spacer	1
#23	010-790-1	Suspension Ring	1
#24	020-852-1	Rear Packing	1
#25	018-857-1	Front Packing	1
#29	962-008-0	Spring Washer (2-5S)	4
#30	960-036-0	Hexagon Nut (1-M5)	4
#31	970-340-0	○ Pin (H) (4×28)	1
#32	971-122-0	○ Pin (2×22)	1
#33	973-006-0	○ Roll Pin (2×6)	1
#34	973-110-0	Roll Pin (3×10)	2
#35	973-124-0	○ Roll Pin (3×24)	1
#36	977-154-0	○ Cone Spring (7×7.5×17)	1
#37	980-008-0	Round Head Notch (2.4)	1
#38	982-403-0	Ball Bearing (EE-4)	2
#40	981-208-0	○ Ball (5/16)	1
#41	990-004-0	○ O-Ring (P6)	1
#42	990-009-0	○ O-Ring (P10A)	1
#43	990-015-0	○ O-Ring (P15)	2
#44	990-033-0	O-Ring (P34)	1
#45	991-006-0	X-Ring (P12)	1

PARTS FOR UW-6SSHK(K)

#50	018-028-1	× Hammer Casing	1
#51	018-328-1	× Anvil Bushing	1
#52	966-005-0	× Hexagon Head Plug (M6)	1
#53	990-003-0	× O-Ring (P5)	1
#54	990-601-0	× O-Ring (15×1.7)	1
#55	143-319-1	Anvil (P)	1
#57	971-202-0	Pin (3×2)	1
#58	976-018-0	Spring (2.8×8.5)	1
#59	135-800-2	Socket Retainer Pin (Flat)	1
#28-1	947-175-0	Half Head Bolt (M5×75)	4

PARTS FOR UW-6CSH(K)

#60	020-028-1	△●■ Angle Head Casing	1
#61	020-067-1	●■ Angle Head Casing Cover	1
#62	020-420-1	■ Driving Gear	1
#63	020-421-1	■ Driving Gear Bushing	1
#64	020-422-1	■ Driving Gear Bushing Screw	1
#65	020-425-1	■ Driving Gear Spacer	1
#66	020-430-1	●■ Driving Gear (O)	1
#67	020-431-1	●■ Driven Gear Spindle	1
#68	020-432-1	●■ Driven Gear Collar	1
#69	020-433-1	●■ Driven Gear Spacer	1
#70	020-434-1	●■ Driven Gear Bushing	1
#71	020-435-1	●■ Driven Gear Collar Bushing	1
#72	953-205-0	△●■ Allen Head Flat Point Screw (M5×5)	1
#73	966-005-0	△●■ Hexagon Head Plug (M6)	2
#74	990-003-0	△●■ O-Ring (P5)	2
#75	990-501-0	●■ O-Ring (G25)	1
#76	975-795-0	■ Adjusting Spacer (29×26×t)	1
#77	975-830-0	●■ Adjusting Spacer (34×30×t)	1
#78	147-430-1	Driven Gear ("P" Type)	1
#80	971-202-0	Pin (3×2)	1
#81	976-018-0	Spring (2.8×8.5)	1
#82	135-800-2	Socket Retainer Pin (Flat)	1
#28	947-177-0	Half Head Bolt (M5×77)	4

PARTS FOR K (Lightweight) TYPE

# 8	019-285-7	Rear Plate	1
# 9	019-286-7	Cylinder	1
#11	026-289-7	Front Plate	1
#45		Delete	1
#50	026-028-3	Hammer Casing	1
#54	993-033-0	Felt Ring (14×18×1.5)	1
#56	973-006-0	Roll Pin (2×6)	1

ACCESSORIES

#26	932-110-0	Air Regulator (U1/4)	1
#27	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#83	900-056-0	Hexagon Socket (13×25)	1
#84	971-990-0	Pin (3×16.5) ("O" Type)	1
#85	990-290-0	O-Ring (JW12) ("O" Type)	1

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan

URYU SEISAKU, LTD. Osaka, Japan

OKA-160-97-05-15-2005